


Auto Provisioning Yealink Guide

1. Program the extension in the Omnivoice portal. Select the appropriate Yealink template and enter the MAC address for the device.



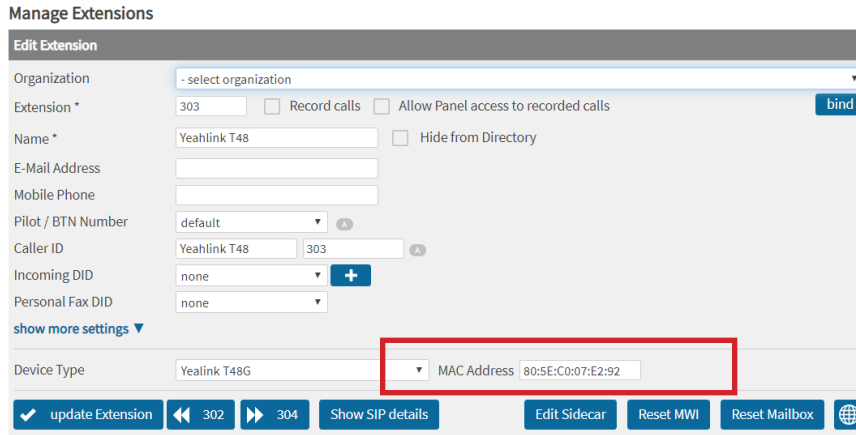


2. Get the local IP address of your new Yealink device by going through the following options:


a. Press the Menu key


b. Press the Status key

c. Note the IPv4 address

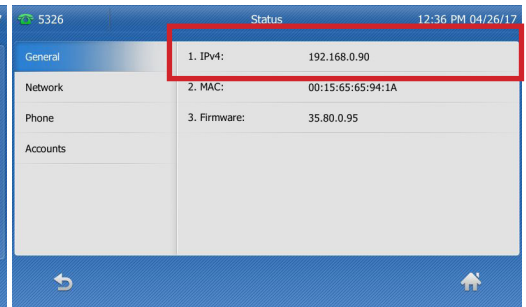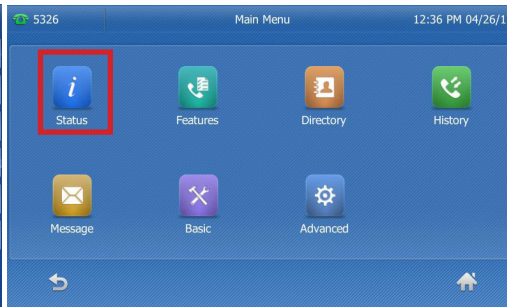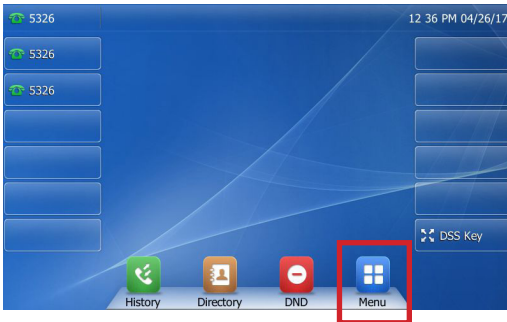

3. From a browser on a computer on the same network as the phone, put the IP in your browser to access the Web Configuration GUI.
4. The default username and password set is **admin/admin**

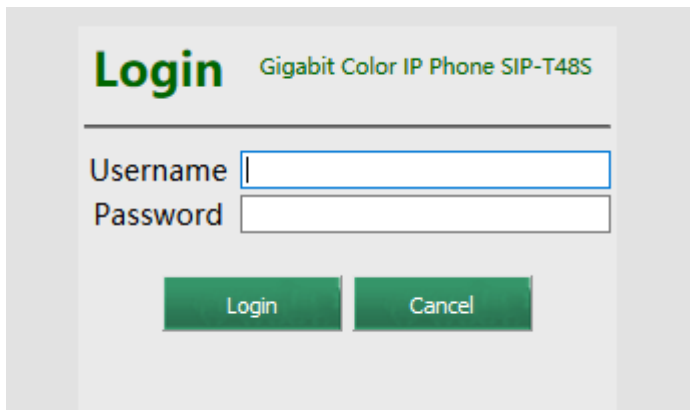


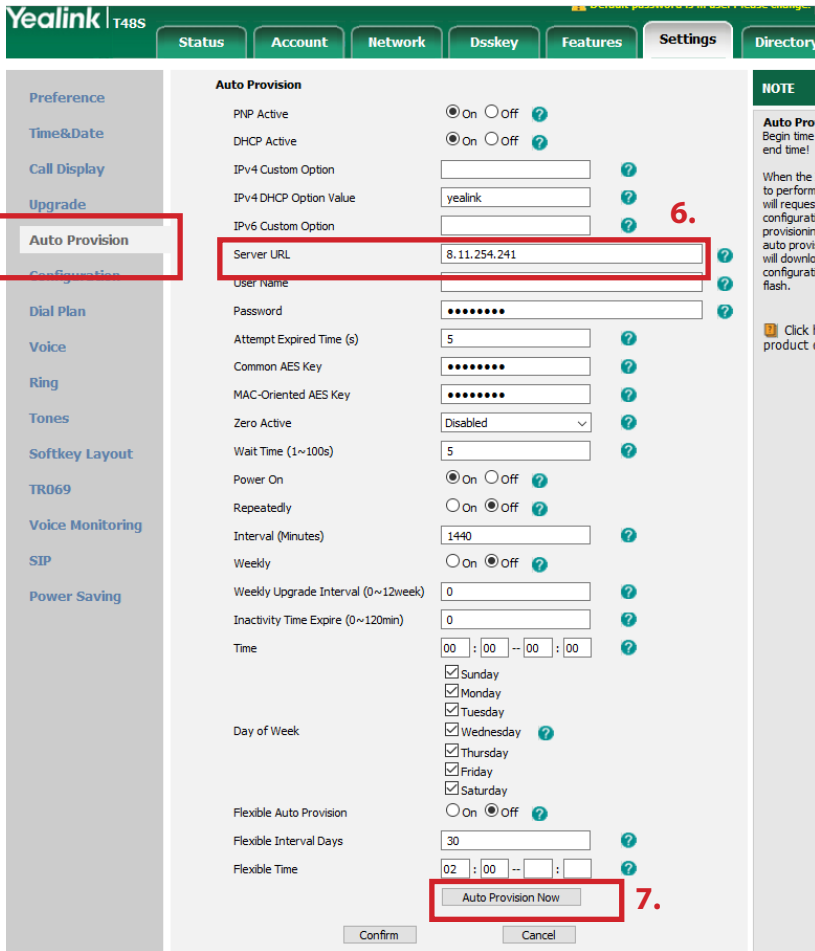

The screenshot shows the 'Auto Provision' settings page in the Yealink T48S web interface. The left sidebar has 'Auto Provision' highlighted with a red box and labeled '5.'. The 'Server URL' field contains '8.11.254.241' and is also highlighted with a red box and labeled '6.'. At the bottom, the 'Auto Provision Now' button is highlighted with a red box and labeled '7.'. Other settings include PNP Active, DHCP Active, IPv4/IPv6 Custom Options, User Name, Password, Attempt Expired Time, Common/MAC-Oriented AES Keys, Zero Active, Wait Time, Power On, Repeatedly, Interval, Weekly, Weekly Upgrade Interval, Inactivity Time, Time, Day of Week, Flexible Auto Provision, Flexible Interval Days, and Flexible Time.

5. Go to the Setting tab and select the **Auto Provision** on the left menu
6. Enter in **8.11.254.241** in the Server URL Option, and press the Confirm button.
7. Press the Auto Provision Now button.

8. It is also good practice to change the administrator password. To do so, select the **Security** tab, then **Password** on the **left menu**.

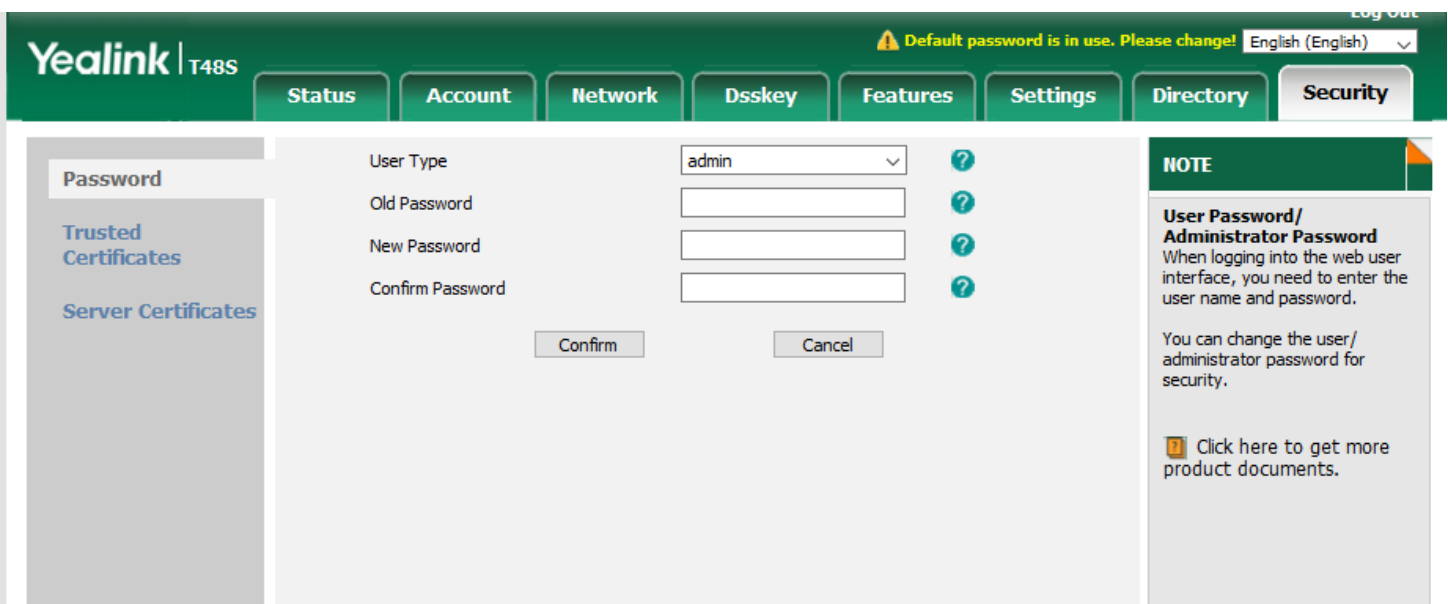

The screenshot shows the 'Security' tab in the Yealink T48S web interface, specifically the 'Password' section. The left sidebar has 'Password' highlighted. The main area contains fields for 'User Type' (set to 'admin'), 'Old Password', 'New Password', and 'Confirm Password'. There are 'Confirm' and 'Cancel' buttons at the bottom. A 'NOTE' box on the right states: 'User Password/ Administrator Password: When logging into the web user interface, you need to enter the user name and password. You can change the user/administrator password for security. Click here to get more product documents.'